


Extension screen

PRODUCT FACT SHEET

4

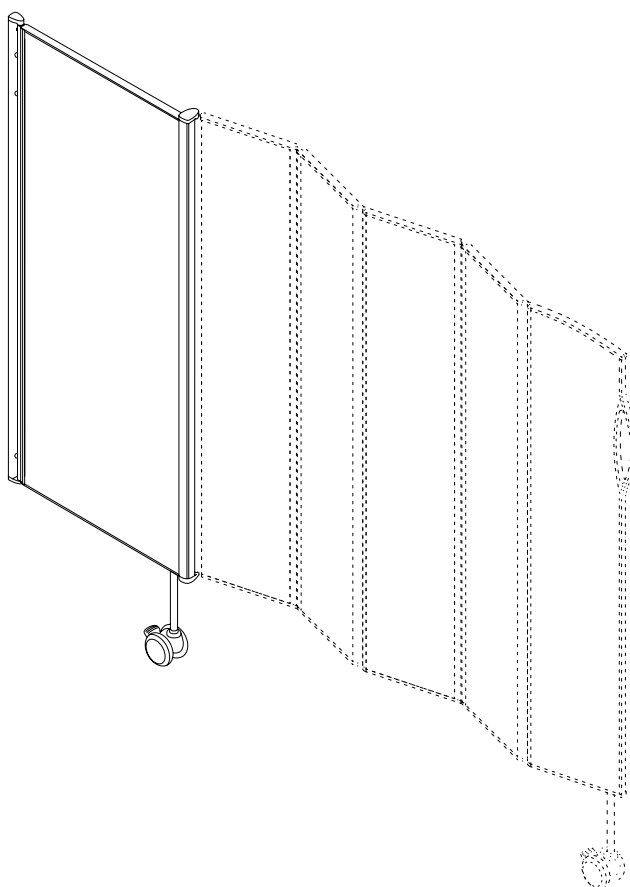

07/2024



MADE IN SWEDEN
www.silentia.com

Product specifications

The Silentia extension screen is used to move a folding screen mounting point away from the wall to accommodate equipment or furniture. It can also be used independently as a divider wall. The extension screen is available in a variety of lengths, heights, and colors.

Material

The screens are made of high-pressure laminate and a aluminum frame. The connections are made of polyamide and fiberglass. The wheels are made of polyamide with polyurethane tires. The connections are made of polyamide reinforced with fiberglass. The lightweight construction is user-friendly and optimizes stability and safety.



Dimensions & sizes

Height



1,45 m , 1,65 m & 1,85 m

Length


0,5 m to 1,2 m

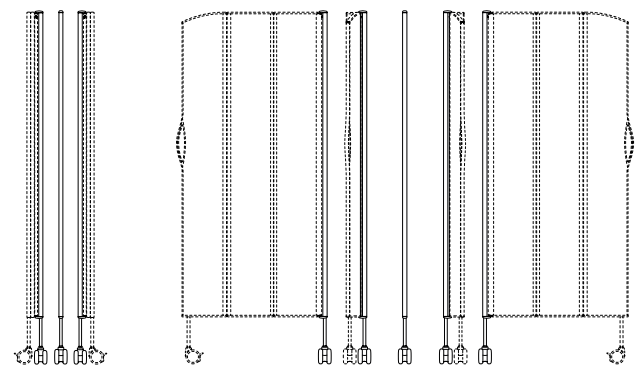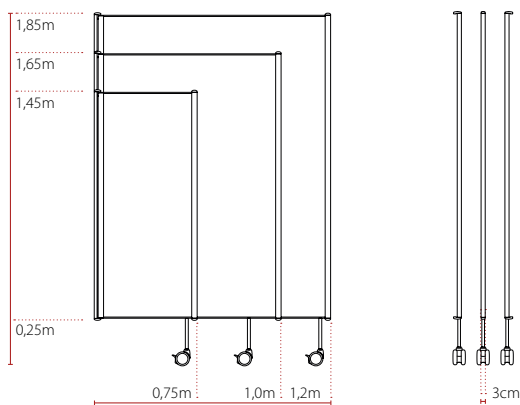

Combined with folding screen

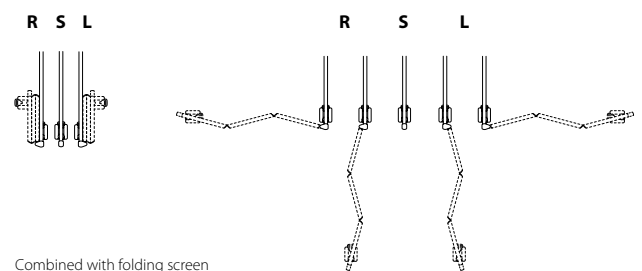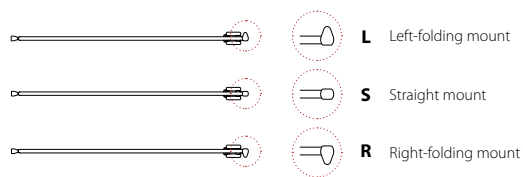

Combined with folding screen

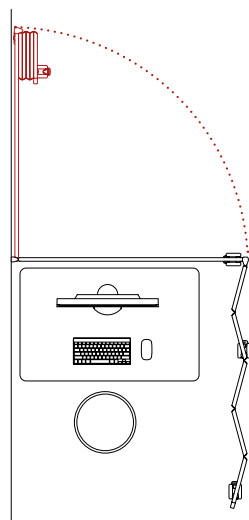

Use of screens example:
1 x extension screen (1,2m)

R Right-folding mount

1 x folding Screen (1,25m)
approx. floor area: 1,5m²



Extension screen

Fill in **L**, **R** or **S**

Length		0,5	0,75	1,0	1,2
Height	1,45	3.3 kg	4.8 kg	6.2 kg	7.3 kg
	1,65	3.6 kg	5.4 kg	6.8 kg	8.1 kg
	1,85	3.9 kg	6.1 kg	7.4 kg	8.8 kg

Product specifications

Care & maintenance

EasyClean™ All products meet strict hygiene requirements and all surfaces are accessible for cleaning. The screens have hard and smooth surfaces that do not trap dust and withstand the majority of detergents that are used in healthcare. The wheels can easily be removed and cleaned in a dishwasher.

Handling/Use

EasyClick™ Quickly and easily assemble and combine with folding screens.

Sustainability

Silentia focuses on developing long-lasting products that minimize our environmental impact. Since 1990, Silentia has been committed to improving patient care around the world with a safe, hygienic, and resource-efficient privacy system. [LINK TO SUSTAINABILITY PAGE](#)

Recycling & disassembly

The screen is recyclable and all parts can be completely separated and individually delivered to a suitable recycling facility.

Certificates / Listing



EN ISO 9001:2015



EN ISO 14001:2015



Listed as interior solution for the
["WORLD'S GREENEST HOSPITAL"](#)

Tests

Silentia can provide fire tests, durability tests, etc. Please contact the Silentia sales team for specific information.

Warranty

Silentia provides a 2-year warranty. Spare parts are available. Please contact the Silentia sales team for further information about warranty terms and conditions.

Downloads

[LINK TO 2D/3D FILES](#)

[LINK TO SILENTIA MANUAL](#)

[LINK TO CARE & MAINTENANCE VIDEO](#)

Installation

Wall installation

Attaches directly to the wall.


Wall mount directly to wall



Wall mount + spacers





Wall mount on medical rail

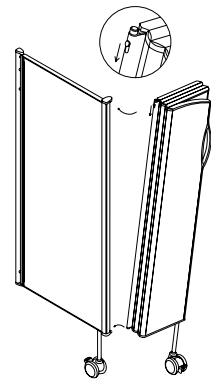


Floor pole installation



For rooms where wall space is limited.
Anchors to the floor.

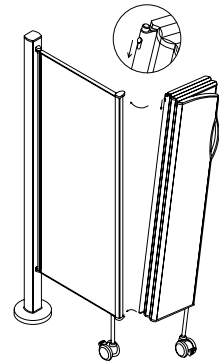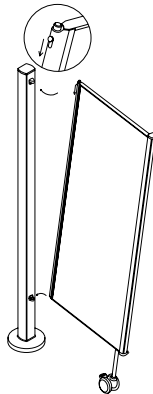


Extension screen variations

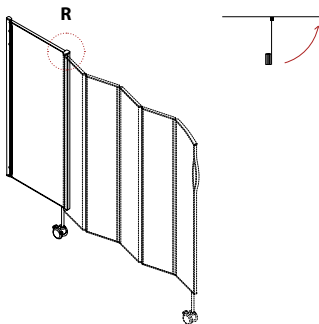

R Right-folding mount

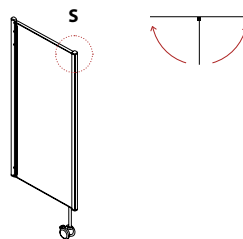

S Straight mount

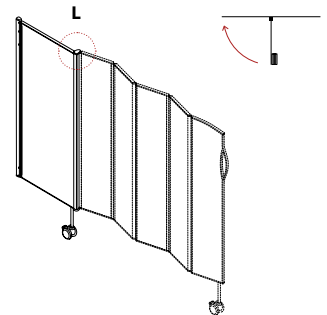

L Left-folding mount

Extension screen: Right-folding



The right-folding extension screen combines with one left-folding folding screen.

Extension screen: Straight



The straight-mounted extension screen can be used as a stand-alone divider or be combined with a right- or left-folding extension screen.

Extension screen: Left-folding




The left-folding extension screen combines with one right-folding folding screen.

Design

Color ☐

Laminated panels are available in a variety of colors.

- 
White (W)
☐
- 
Forest (F)
☐
- 
Ocean (O)
☐
- 
Tropical (T)
☐
- 
Savannah (S)
☐
- 
Birch (B)
☐
- 
Lime (L)
☐
- 
Mandarin (M)
☐



No. of screens: _____